



What does the error code "E21" mean on my MultiServe?

Message E21 indicates insufficient water.

Ensure the water tank is full or has enough water for the selected drink size.

If the message remains, replace the water tank and turn the unit off and on to reset the sensor and clear the message.

If this does not resolve, contact Braun Customer Service.